INSTRUCTIONS

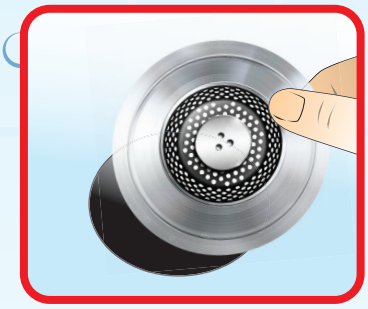

I. Remove your current strainer or basket. Place your Kitchen SinkShroom® onto your drain prior to washing dishes.



II. When basket is full or any time after dishes are washed, pick up unit from center cylinder and tap upside down against garbage bin to dispose of waste.



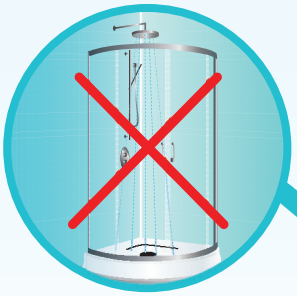

Not compatible with Shower, Tub, or Bathroom Sink drains, Kitchen SinkShroom is made specifically for Kitchen sink drains.

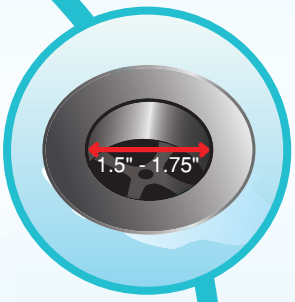

Make sure your drain is a standard 3.5" to 4.5" width to ensure a proper fit and optimal performance.



SPECIAL INSTRUCTIONS



Clear the Drain if Clogged Before Installation



Kitchen SinkShroom® must level with the drain opening to ensure water and debris flow smoothly into the center.