

INSTRUCTIONS

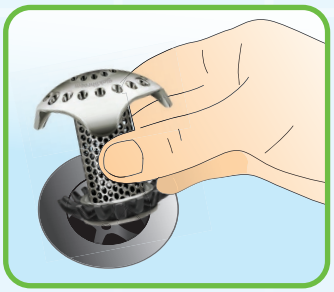


Insert SinkShroom® into the drain. Installs in seconds

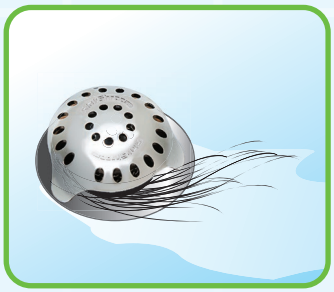

The hair wraps up neatly around the cylinder




All the hair is in one place and ready for clean up

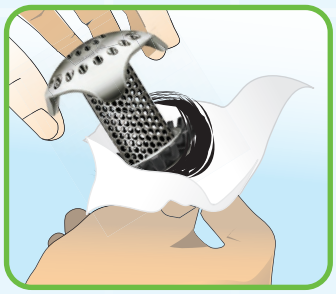


Remove the hair with one effortless move



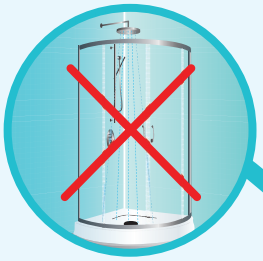

Not compatible with walk-in shower drains or with bath tub drains.

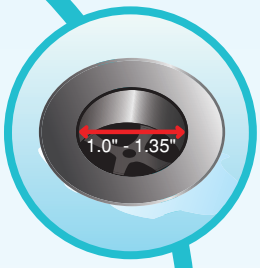


Make sure your drain is a standard 1.0" to 1.35" width and remove your current stopper



Clear the Drain if Clogged Before Installation



SinkShroom® must sit raised around 0.5" for optimal performance as illustrated. Clean regularly.

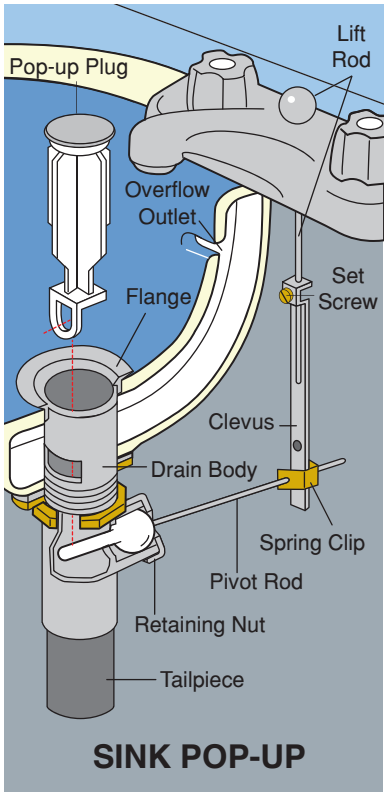

SINK POP-UP

Some Sink Models Have a Stopper Mechanism that Will Need to be Removed. In such cases - Unscrew the Retaining Nut, Pull Pivot Rod Out, and Remove the Stopper. Screw Retaining Nut back in place